




# **Assembly Instructions**

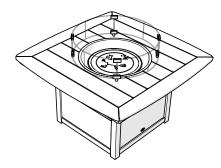

TXCTF42N

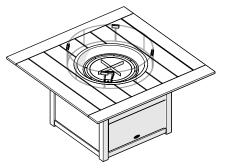

TXCTF42S

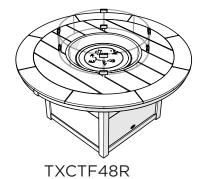

TXCTF42N, TXCTF42S, TXCTF48R

### 20-Year Warranty

To view our full warranty, please visit trexfurniture.com/warranty

### Share your space .....

We love to see where our furniture ends up — snap a pic and share it with us on Facebook! facebook.com/trexfurniture

## Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **(877) 907-TREX** (8739) or email support@trexfurniture.com

### Cleaning Tips

Keep your Trex Outdoor Furniture™ looking brand new:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:


You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush


Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.


trexfurniture.com

# **TOOLS**

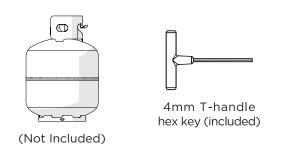


## **PARTS**

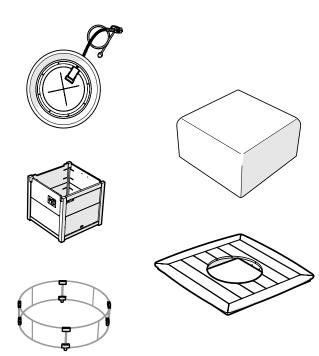


 


Note: Line up top screw holes with base screw holes

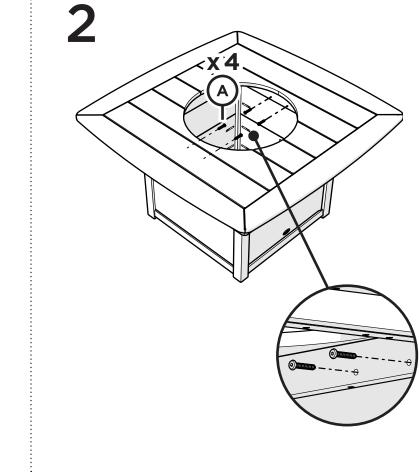

See Crystal Fire Plus manual for burner installation

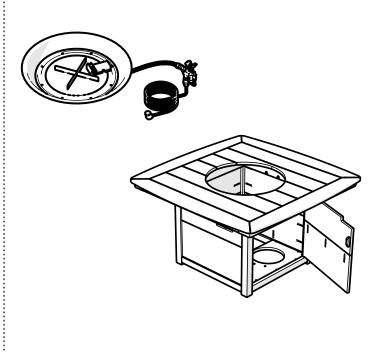


4

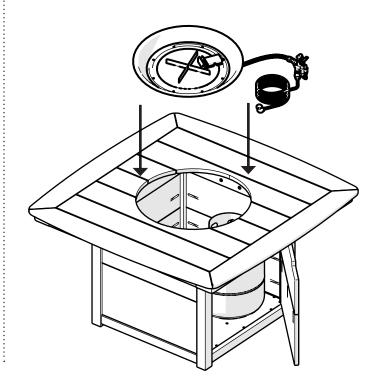

See Glass Guard-20-R manual for assembly instructions

Important! Glass Guard Required

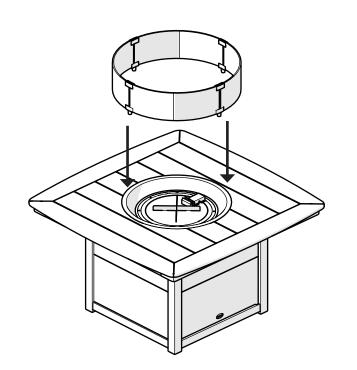

Protect with included cover when not in use. Before covering, allow sufficient time for the unit to cool after use.



When turning off the gas, wait until bowl has cooled down and tilt propane tank forward.