
POLYWOOD®

Assembly Instructions

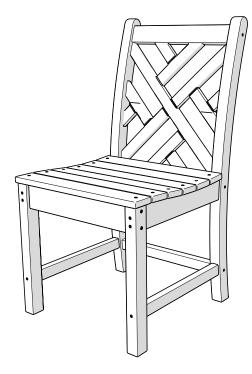

NO ASSEMBLY REQUIRED

CDD100 Chippendale Dining Side Chair



20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty: polywood.com/warranty



Cleaning Tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a soft bristle brush. Hose down to rinse.

Thank 1 on

Thank you for choosing POLYWOOD! We hope your new furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

.....



Sign up at: polywood.com/welcome

You'll be the first to hear about new product launches, giveaways, special offers, and more!



If you have questions regarding assembly instructions, warranty claims, or missing parts, please visit our Help Center at help.polywood.com



For assembly tips and videos visit: polywood.com/assembly

Share Your Space

We love to see your furniture at home - share a photo or video and tag us on Instagram or Facebook for your chance to be featured!

#polywood





Sinterest.com/polywood



facebook.com/polywoodoutdoor

Join thousands of fans in our Outdoor Living Community! facebook.com/groups/polywoodoutdoorliving



Did You Know?

Our long-lasting furniture is made using plastics that could otherwise pollute oceans and overwhelm landfills — and it can also be recycled when the time comes. Better for the planet, better for all.

20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty: polywood.com/warranty

Cleaning Tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:


Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

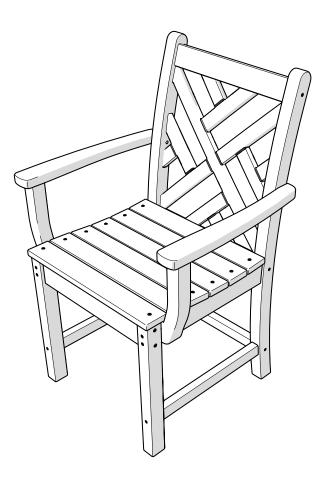

CDD200, CDD201, CDD202 Chippendale Arm Chair

Thank You

Thank you for choosing POLYWOOD! We hope your new furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

.....

(⊠) Join the POLYWOOD Community

Sign up at: polywood.com/welcome

You'll be the first to hear about new product launches, giveaways, special offers, and more!


X

We're Always Here For You

If you have questions regarding assembly instructions, warranty claims, or missing parts, please visit our Help Center at help.polywood.com



For assembly tips and videos visit: polywood.com/assembly

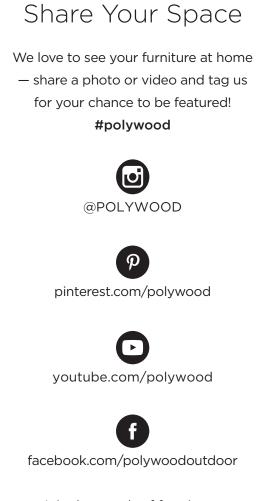



Join thousands of fans in our Outdoor Living Community! facebook.com/groups/polywoodoutdoorliving




Did You Know?

Our long-lasting furniture is made using plastics that could otherwise pollute oceans and overwhelm landfills — and it can also be recycled when the time comes. Better for the planet, better for all.

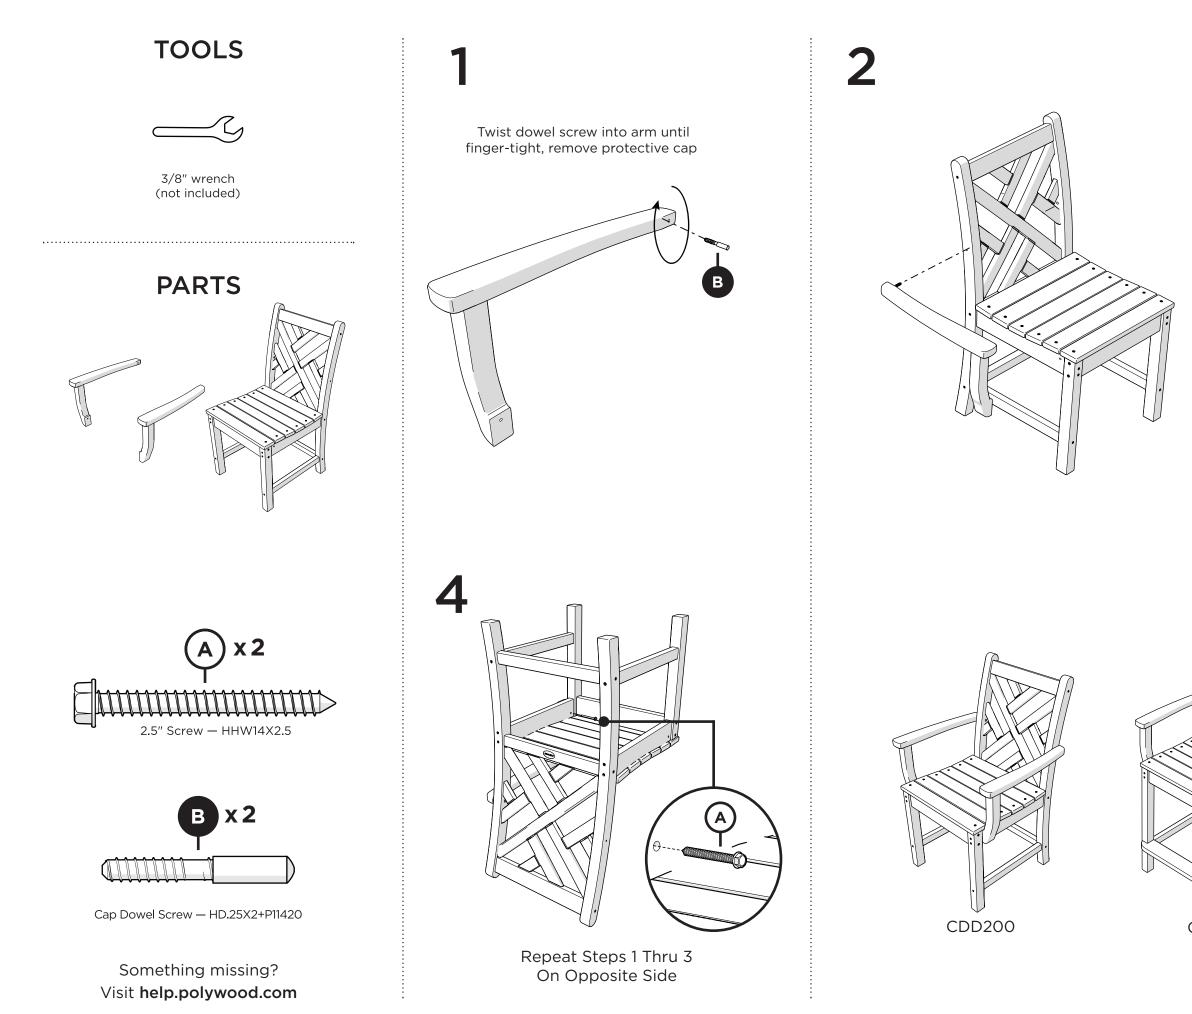

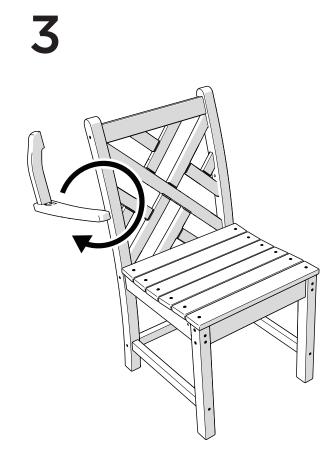



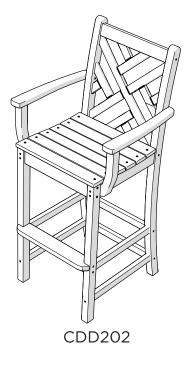

20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty: polywood.com/warranty

Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

Thank You

Thank you for choosing POLYWOOD! We hope your new furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

Join the POLYWOOD Community

Sign up at: polywood.com/welcome

You'll be the first to hear about new product launches, giveaways, special offers, and more!



We're Always Here For You

If you have questions regarding assembly instructions, warranty claims, or missing parts, please visit our Help Center at help.polywood.com



For assembly tips and videos visit: polywood.com/assembly

PL36-T3L2 Rustic Farmhouse 60" Backless Bench





Join thousands of fans in our Outdoor Living Community! facebook.com/groups/polywoodoutdoorliving





Did You Know?


Our long-lasting furniture is made using plastics that could otherwise pollute oceans and overwhelm landfills — and it can also be recycled when the time comes. Better for the planet, better for all.

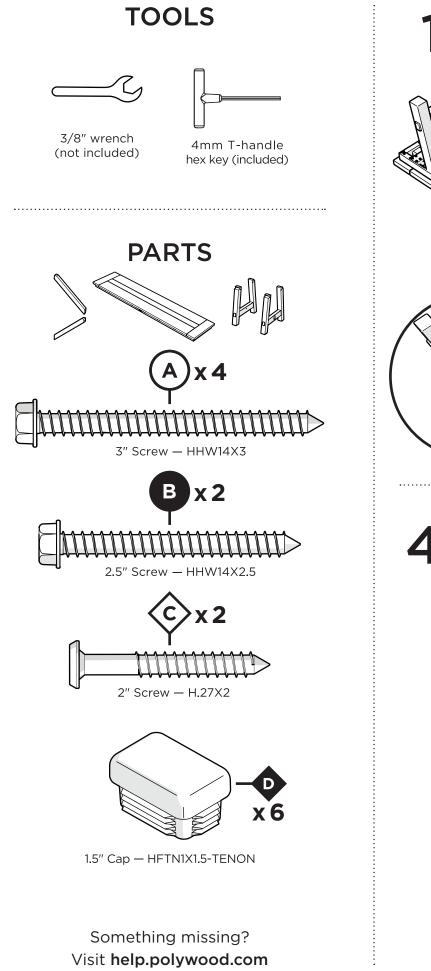


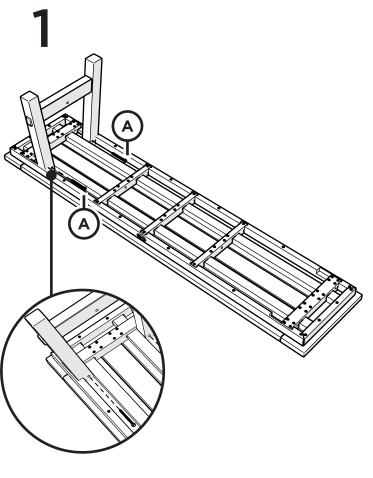

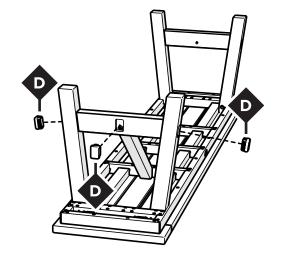

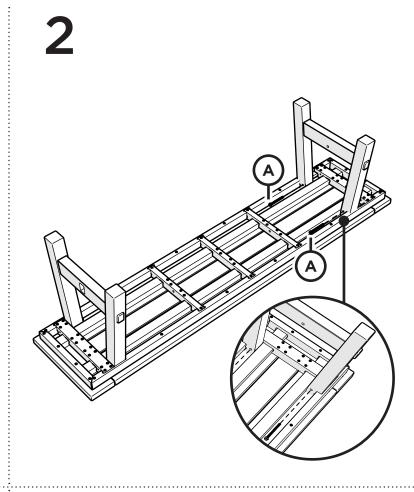

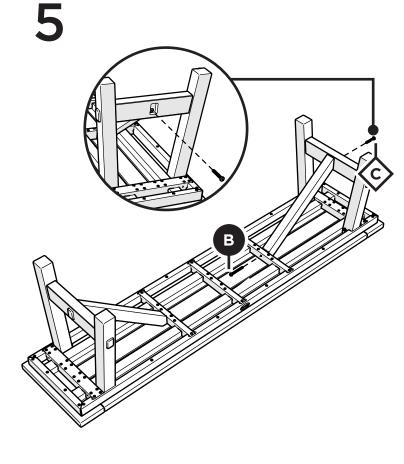

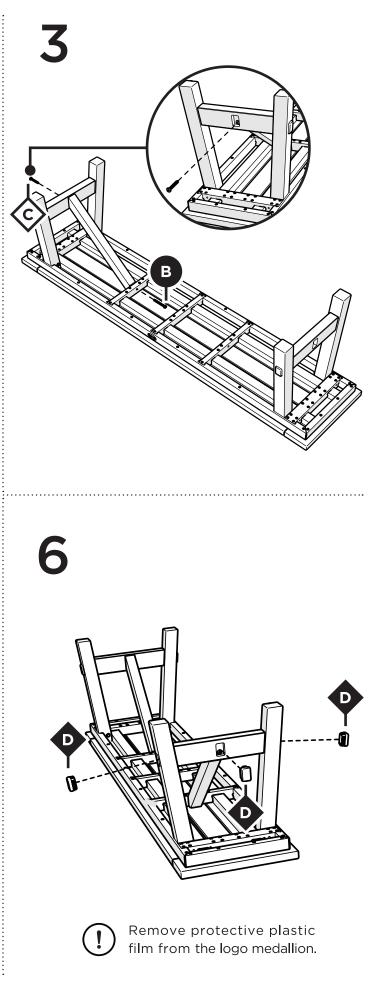

20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty: polywood.com/warranty

Cleaning Tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

Thank You

Thank you for choosing POLYWOOD! We hope your new furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

Join the POLYWOOD Community

Sign up at: polywood.com/welcome

You'll be the first to hear about new product launches, giveaways, special offers, and more!

X

We're Always Here For You

If you have questions regarding assembly instructions, warranty claims, or missing parts, please visit our Help Center at help.polywood.com



For assembly tips and videos visit: polywood.com/assembly

polywood.com

PL83-T3L2

Rustic Farmhouse

39" X 75" Dining Table



Join thousands of fans in our Outdoor Living Community! facebook.com/groups/polywoodoutdoorliving



Did You Know?

Our long-lasting furniture is made using plastics that could otherwise pollute oceans and overwhelm landfills — and it can also be recycled when the time comes. Better for the planet, better for all.

