

Trex® Outdoor Furniture™


Assembly Instructions

This instruction booklet showcases how to assemble the products listed below:

SOFA

TXC71


Rockport Club Sofa

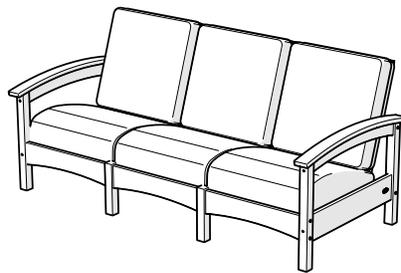

LOVESEAT

TXC47

Rockport Club Loveseat

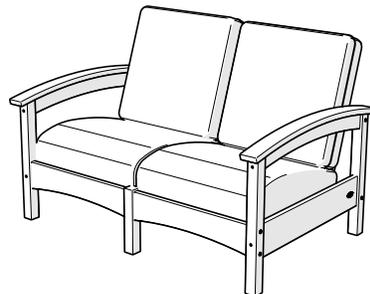

Prior to assembly, sort boxes and verify required sections are accounted for.

20-Year Warranty

To view our full warranty, please visit
trexfurniture.com/warranty

Share your space

We love to see where our furniture
ends up — snap a pic and share
it with us on Facebook!
[facebook.com/trexfurniture](https://www.facebook.com/trexfurniture)

Having Trouble?

If you have questions or concerns regarding
assembly instructions or missing parts,
please contact us at **(877) 907-TREX** (8739)
or email support@trexfurniture.com

Cleaning Tips

Keep your Trex Outdoor Furniture™
looking brand new:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:


You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth
and let it sit on the lumber for a few
minutes (this will not affect the color).
Then, loosen any dirt and debris that
may catch in surface grooves with a
soft bristle brush; hose down to rinse.

SOFA

TXC71 — Rockport Club Sofa

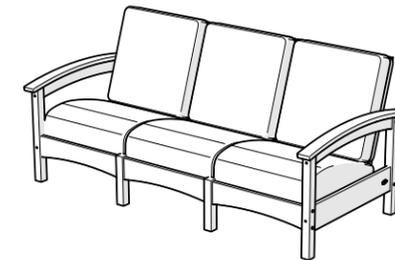


Required Sections:

Items are shipped in multiple boxes

- TXC47
- CLC23C
- XUF0015 - x3

LOVESEAT


TXC47 — Rockport Club Loveseat

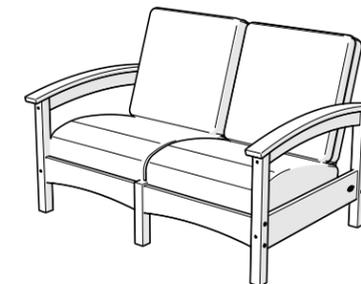

Required Sections:

Items are shipped in multiple boxes


- TXC47
- XUF0015 - x2

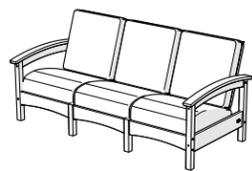

SOFA ASSEMBLY

Rockport Club Sofa (TXC71) Shown

TOOLS

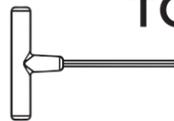


4mm T-handle hex key (included)



4mm hex for drill (included)


PARTS

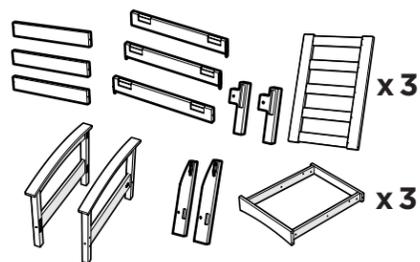

x3


x3

 A x8




3" Screw — H.27X3

 B x12




2" Screw — H.27X2

 C x8




1.75" Screw — H.27X1.75

 D x4




.81" Screw — H.27x.81

1

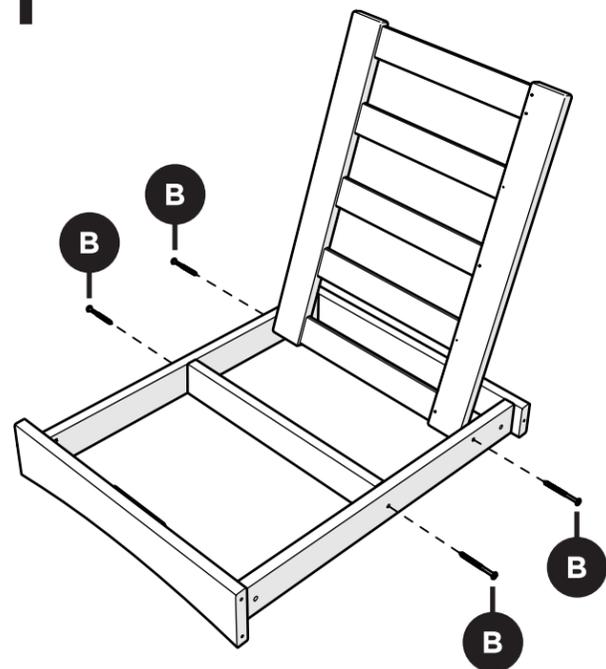


Repeat this step for (3) sections

2

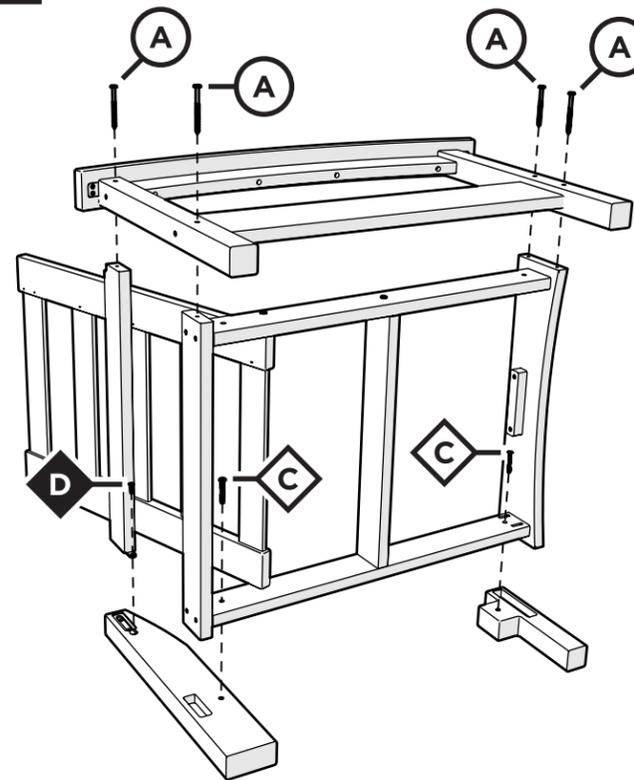


3

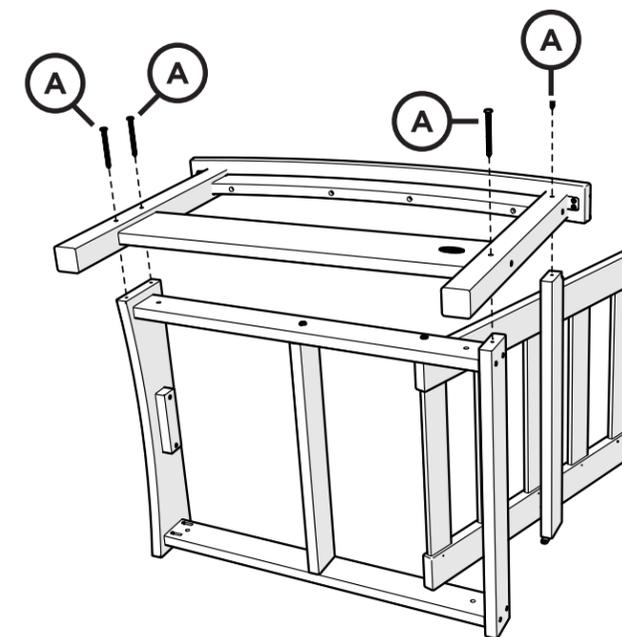


4


CLC23C

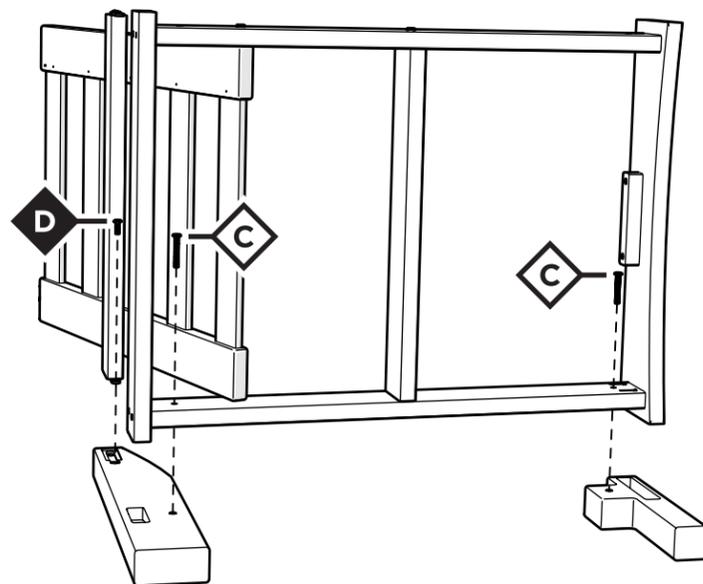


5

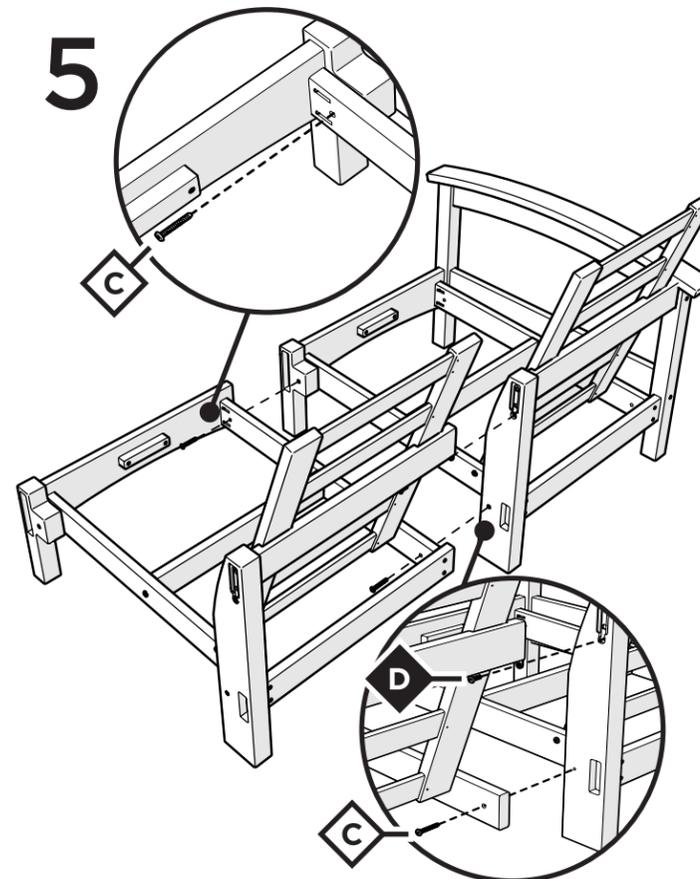

6

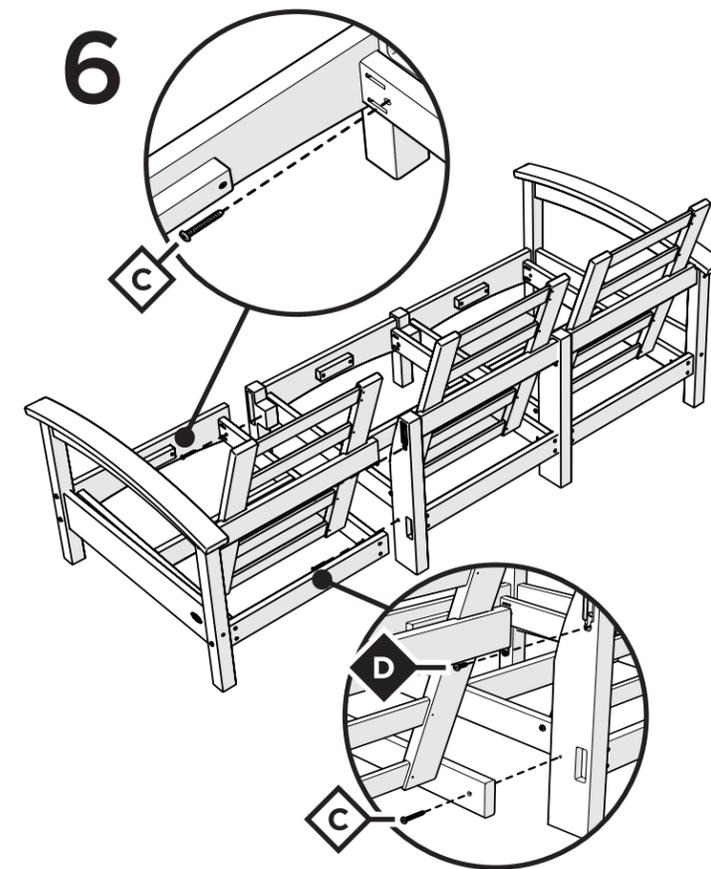


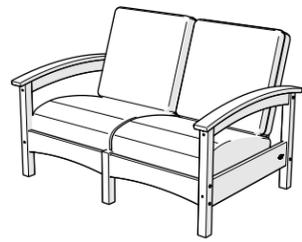

LOVESEAT ASSEMBLY

Rockport Club Loveseat (TXC47) Shown

TOOLS

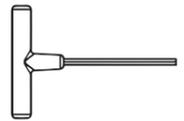


4mm T-handle
hex key (included)




4mm hex for drill
(included)

PARTS

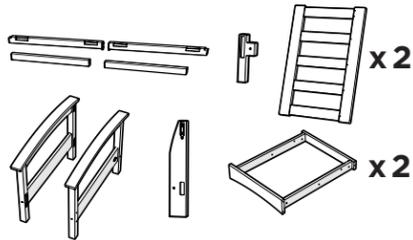


A x 8

 


3" Screw — H.27X3

 B x 8




2" Screw — H.27X2

 C x 4




1.75" Screw — H.27X1.75




 
D x 2



.81" Screw — H.27x.81

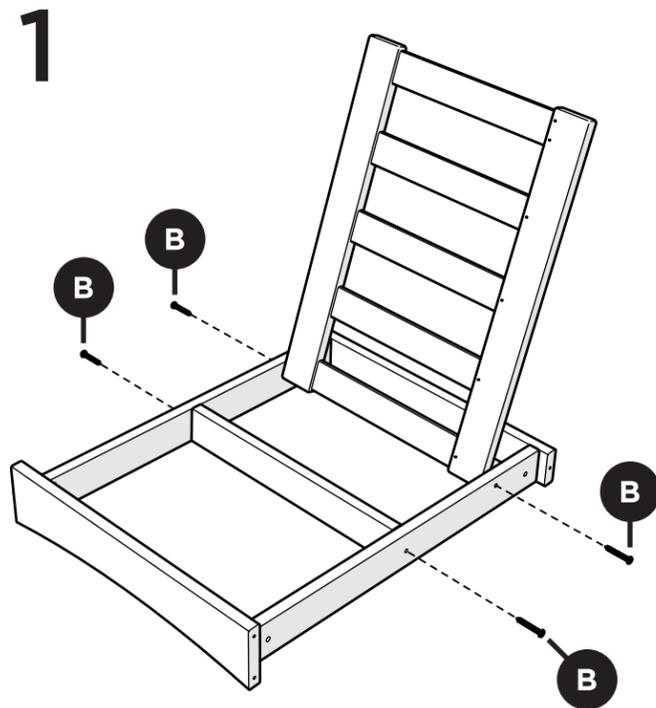

Repeat this step for (2) sections

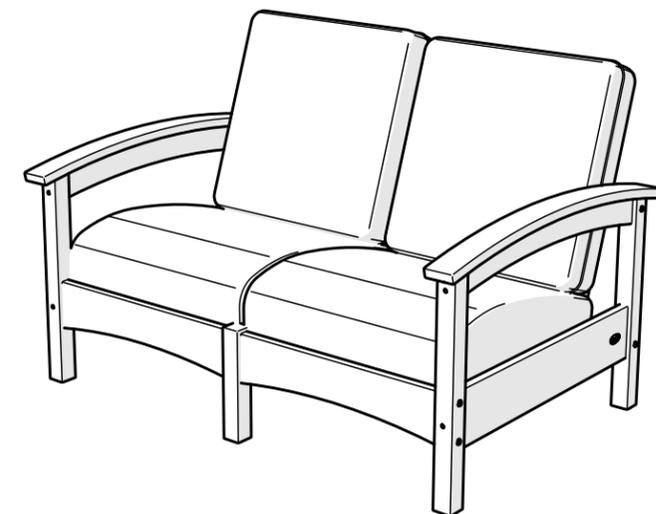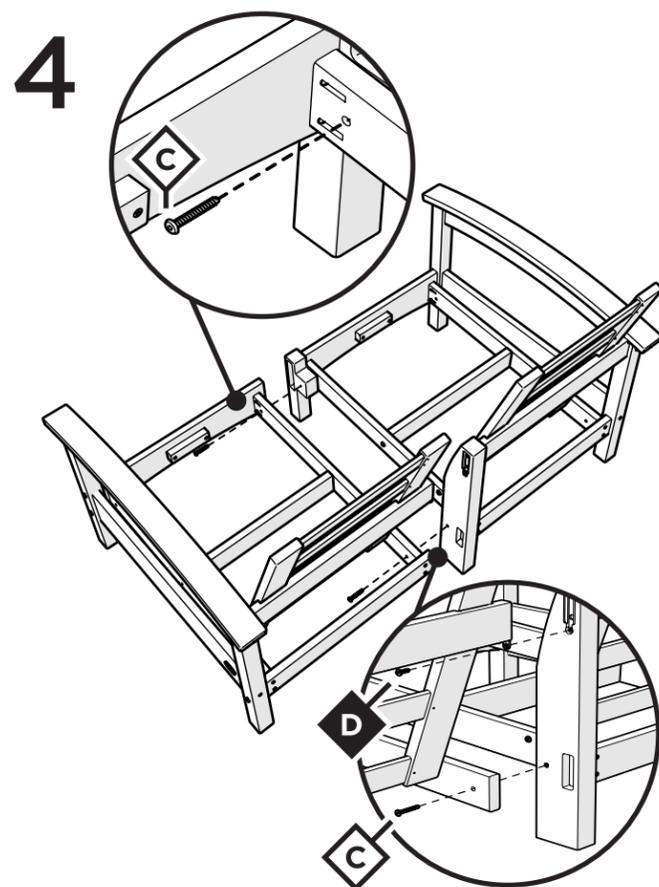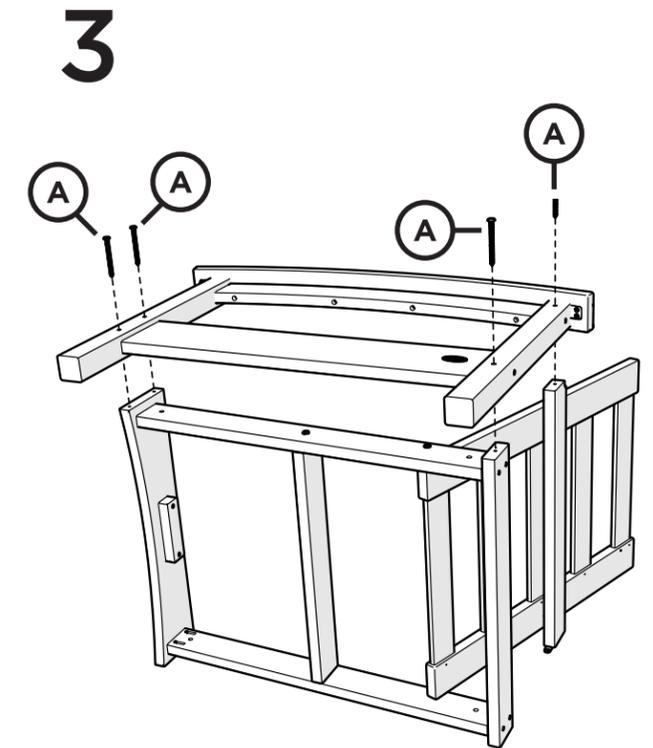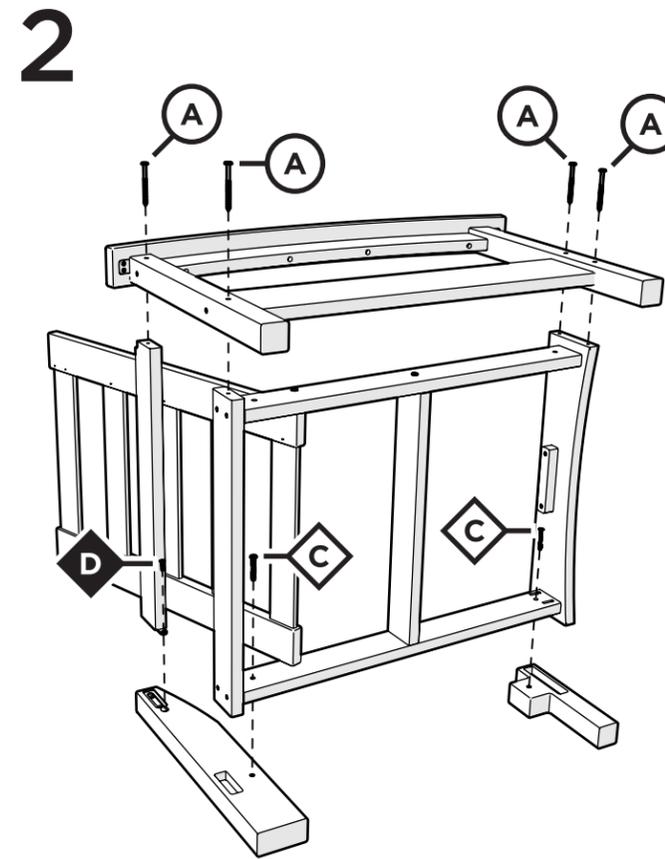

Trex® Outdoor Furniture™