All Weather Furnishings

Step 1 Attach leg assemblies to table top using (8) 2-1/2" chair bolts.

Model:

RT448


- (1) Table top
- (2) Leg Assemblies (2) Brace
- (1) Hardware pack

TOOLS NEEDED



Step 2 Attach braces to leg assemblies using (4) 2-1/2" screws.

Description Qty. A - 14 X 2.50 HEX WASHER T-A ALCHM 8 B - .273 X 2.50 SOCKET WAFER A 4

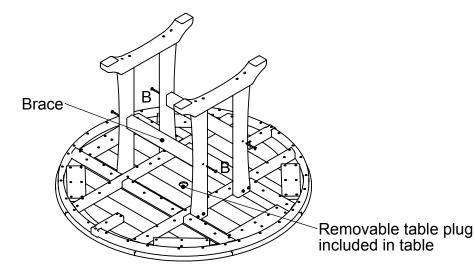

Leg Assembly

Table top



Join the POLYWOOD® Community

Share in the love of outdoor living, recycling, and more...







@POLYWOODINC



youtube.com/polywood



POLY-WORLD



POLYWOOD




To view our full warranty, please visit the warranty page on our website at polywoodinc.com/resources.

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (877) 457-3284 or email support@polywoodinc.com

POLYWOOD

Assembly Instructions

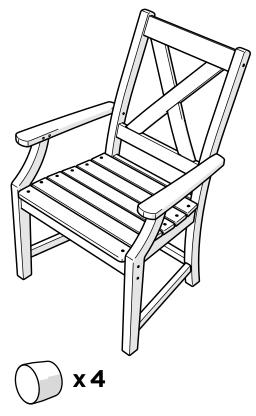

Hole Plug — HSP.312x.25 (Extra)

NO ASSEMBLY REQUIRED

TGD280
Braxton Dining
Arm Chair



Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe



Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!

#polywood #rethinkoutdoor



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood







Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com



20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:

Wipe on ½ bleach and ¾ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a $\frac{1}{3}$ bleach and $\frac{2}{3}$ water solution and scrub with a softbristle brush. Hose down to rinse.